


# Sleeve Replacement Tools

1. Remove expired sleeve from valve housing.
2. Lubricate one end of the sleeve with a liquid soap solution.  
DO NOT use a petroleum product such as WD-40™.
3. Insert the tip of the insertion tool into the replacement sleeve.
4. Place the valve body on a solid surface.
5. Start the lubricated end of the sleeve at an angle to the valve body and push it into the valve body until the top flange is seated.
6. If the bottom flange is not completely seated, use the insertion tool to wedge it into place.
7. When replacing valve end caps, be sure both flange ends are well lubricated.

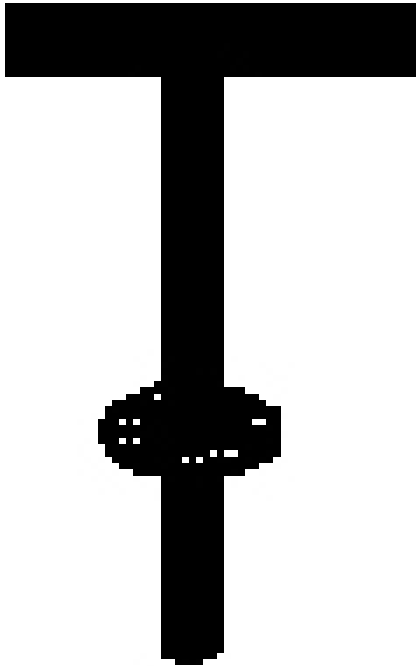

<b>Part #</b>	<b>Price</b>	<b>Description</b>	
<b>AP-6177</b>	<b>\$17.00</b>	<b>AIT-02</b>	<b>(1/4" Insertion Tool)</b>
<b>AP-6178</b>	<b>\$19.00</b>	<b>AIT-03</b>	<b>(3/8" Insertion Tool)</b>
<b>AP-6179</b>	<b>\$21.00</b>	<b>AIT-05</b>	<b>(5/8" Insertion Tool)</b>
<b>AP-6180</b>	<b>\$37.00</b>	<b>AIT-08</b>	<b>(1" Insertion Tool)</b>
<b>AP-6181</b>	<b>\$37.00</b>	<b>AIT-10</b>	<b>(1-1/4" Insertion Tool)</b>